

Pull Tubes - Manual (5770 & 5770IVC)

| ltem | | | | Quantity Per | |
|--|------|--------------|--|--------------|----------|
| Number | Note | Part Number | Description | Package | Assembly |
| 1 | | 5510M008 | Tube, Pull, Foot w/ Flattened End | 1 | 1 |
| 2 | | 51000M191 | Cover, Pull Tube (Head/Foot) | 1 | 1 |
| 3 | | 5510M010 | Pull Tube Foot Assembly w/ Flattened End | 1 | 1 |
| 4 | В | 7001M012 | Handle, Crank, Elevating (Long) | 1 | 1 |
| 5 | | 5510M015-NLA | NLA - Tube, Pull, Head | 1 | 1 |
| 6 | | 5880M061-NLA | NLA - Tube, Pull, Head End Assembly | 1 | 1 |
| 7 | | 7000M235 | Pull Tube with Nut - Head | 1 | 1 |
| 8 | А | 5770M014-NLA | NLA - Handle, Crank, Elevating (Short) | 1 | 1 |
| 9 | | 7000M503 | Pull Tube with Nut - Foot with Round Slotted End | 1 | 1 |
| 10 | | 5880M006 | Lanyard with Hitch Pin Assembly | 1 | 1 |
| 11 | С | 5300M054 | Mount, Motor | 1 | 1 |
| NOTE: A - Before 4/6/96 B - After 4/5/96, Crank Handle is not interchangeable with old assemblies. C - After 12/8/94 | | | | | |