
Axles, Axle Mounting Plates, and Hardware Chairs w/o Vent Tray, 18" Wheels and Tilt Hand Release

This category is for chairs with 18" wheels and Permanent Axles ONLY. For chairs with 18" wheels and Quick Release Axles, see Axle Category for 12/20/22/ & 24" wheels.

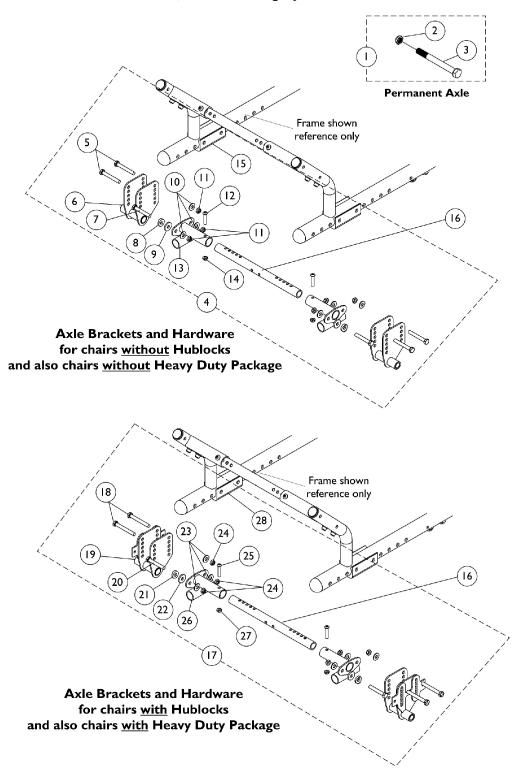

Axles, Axle Mounting Plates, and Hardware Chairs w/o Vent Tray, 18" Wheels and Tilt Hand Release

This category is for chairs with 18" wheels and Permanent Axles ONLY. For chairs with 18" wheels and Quick Release Axles, see Axle Category for 12/20/22/ & 24" wheels.

| Item | | | | Quantity Per | |
|--------|------|-------------|---|--------------|----------|
| Number | Note | Part Number | Description | Package | Assembly |
| 1 | | 1127817 | Kit, Axle with Locknut | 2 | 1 |
| 2 | | | Locknut (1/2-20) | 1 | 2 |
| 3 | | | NLA - Screw, Hex Head (1/2-20 x 6") | 1 | 2 |
| 4 | A,B | 1146394-NLA | NLA - Kit, Axle Brackets with Hardware | 1 | 1 |
| 5 | | | Screw, Hex Head (5/16-24 x 2-1/4") | 1 | 4 |
| 6 | | | NLA - Bracket, Axle, Black - Right | 1 | 1 |
| 6 | | | NLA - Bracket, Axle, Black - Left | 1 | 1 |
| 7 | | | Screw, Hex Head (5/16-24 x 2") | 1 | 2 |
| 8 | | | NLA - Bushing, Nylon Guide | 1 | 2 |
| 9 | | | Washer, Nylon (5/16 x 7/8 x 1/8") | 1 | 2 |
| 10 | | | Washer, Steel (5/16 x 3/4 x 1/16") | 1 | 6 |
| 11 | | | Locknut (5/16-24) | 1 | 6 |
| 12 | | | Screw, Socket Button Head (1/4-28 x 1-1/4") | 1 | 2 |
| 13 | | | Bracket, Lower Crossbrace Receiver, Black | 1 | 2 |
| 14 | | | Locknut (1/4-28) | 1 | 2 |
| 15 | | | Bracket, Axle Spacer, Black | 1 | 2 |
| 16 | С | See Chart | #16 Kit, Crossbraces with Hardware | 1 | 1 |
| 17 | D,E | 1146395-NLA | Kit, Axle Brackets with Hardware | 1 | 1 |
| 18 | | | Screw, Hex Head (5/16-24 x 2-1/2") | 1 | 4 |
| 19 | | | Bracket, Axle, Black - Right | 1 | 1 |
| 19 | | | Bracket, Axle, Black - Left | 1 | 1 |
| 20 | | | Screw, Hex Head (5/16-24 x 2") | 1 | 2 |
| 21 | | | NLA - Bushing, Nylon Guide | 1 | 2 |
| 22 | | | Washer, Nylon (5/16 x 7/8 x 1/8") | 1 | 2 |
| 23 | | | Washer, Steel (5/16 x 3/4 x 1/16") | 1 | 6 |
| 24 | | | Locknut (5/16-24) | 1 | 6 |
| 25 | | | Screw, Socket Button Head (1/4-28 x 1-1/4") | 1 | 2 |
| 26 | | | Bracket, Lower Crossbrace Receiver, Black | 1 | 2 |
| 27 | | | Locknut (1/4-28) | 1 | 2 |
| 28 | | | Bracket, Axle Spacer, Black | 1 | 2 |

NOTE: A - Chairs without Hublocks and Heavy Duty Package

B - Includes items 5-15, contains enough parts for right and left frames

D - Chairs with Hublocks and/or Heavy Duty Package

C - Kit includes 5 ea. Crossbraces and all attaching hdwr. 1 crossbrace is required for Axle Mounting Hdwr., 3 crossbraces are req'd for Base/Seat Frames, and 1 crossbrace is req'd for Tilt Hdwr.

E - Includes items 18-28, contains enough parts for right and left frames

Axles, Axle Mounting Plates, and Hardware Chairs w/o Vent Tray, 18" Wheels and Tilt Hand Release

This category is for chairs with 18" wheels and Permanent Axles ONLY. For chairs with 18" wheels and Quick Release Axles, see Axle Category for 12/20/22/ & 24" wheels.

#16 Kit, Crossbraces with Hardware

| Seat Width Range 12-16" | Seat Width Range 14-18" | Seat Width Range 16-20" | Seat Width Range 18-22" | Quantity |
|----------------------------|----------------------------|----------------------------|----------------------------|----------|
| 1127700-NLA | 1127701-NLA | 1127702-NLA | 1127703 | 1 |
| See Note(s) A | See Note(s) A | See Note(s) A | See Note(s) B, A | I |
| N/A | N/A | N/A | 1164095 | 1 |
| N/A | N/A | N/A | 1025765 | 14 |
| N/A | N/A | N/A | 1055309 | 10 |
| N/A | N/A | N/A | 1083099 | 4 |

NOTE: A - As of 8/9/07, the finish changed from black anodize to flat black.

B - See part #'s listed below part #1127703 and order together 1 ea. 1164095 Kit, Crossbrace Tubes, 14 ea. 1025765 Locknuts (1/4-28), 10 ea. 1055309 Screw, SBH (1/4-28 x 1-1/4") and 4 ea. 1083099 Screw, SBH (1/4-28 x 1-1/2") as a replacement.