


Switch Options


Before 4/1/96

Pneumatic Switch Control (Sip-N-Puff)

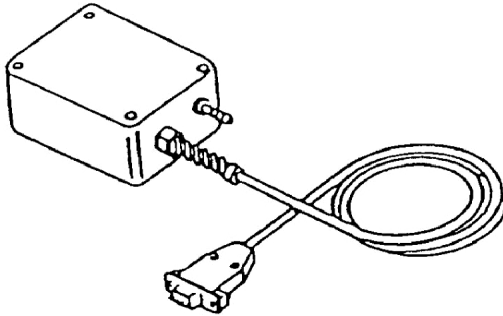


ON CHAIR: ★ 1554
 OFF CHAIR ★ 1031031
 (used with Non-Proportional Display 1030110)

Recliner Interface Cable

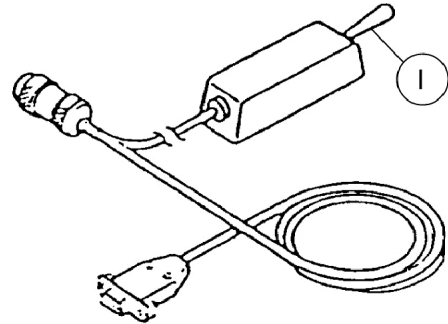


ON CHAIR: ★ 1553
 OFF CHAIR ★ 1010636
 WITHOUT E.C.U ★ 1005151

Recline/Actuator CONTROL BOX

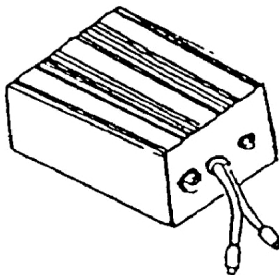

ON CHAIR: 1815
 OFF CHAIR: ★ 1026251

Recliner Interface Cable (Dual E.C.U. / Phono Plugs)

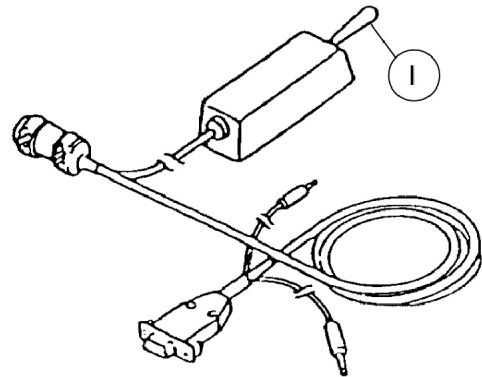

ON CHAIR: 1595
 OFF CHAIR: ★ 1031038

★ Ribbon Reset Switch (1020818) may be required.

Switch Options

Before 4/1/96

Item Number	Note	Part Number	Description	Quantity Per	
				Package	Assembly
	B	1022471-NLA	NLA - Switch, SPDT	1	1
	A,B	1031031	Control, Pneumatic Switch, Off Chair	1	1
	B	1030110-NLA	NLA - Display with Switches and Flextube, MK III	1	1
	A,B	1010636	Cable, Recliner Interface	1	1
	A,B	1005151-NLA	NLA - Cable, Recliner	1	1
	A,B	1026251-NLA	NLA - Recline/Actuator Control Box, Off Chair	1	1
	A,B	1031038-NLA	NLA - Cable, Recliner Interface, Off Chair	1	1
	B	1020818	Switch, Red Flex Ribbon (Tape) Reset	1	1
	C	1123276	Kit, Switch, Black Egg Reset w/ Hook/Loop Adhesive Back Fastener & Attaching Screws (EGSBLK)	1	1
NOTE: A - Ribbon Reset Switch (1020818) may be required) B - See pictorial C - Not Shown. After 5/23/04 the Egg Reset Switch became available as a service part and can be used as a direct replacement for the tape reset switch part # 1020818.					