 
 


PSFM6/PSRM6 Joysticks

 
NOTE: Available 4/16/07

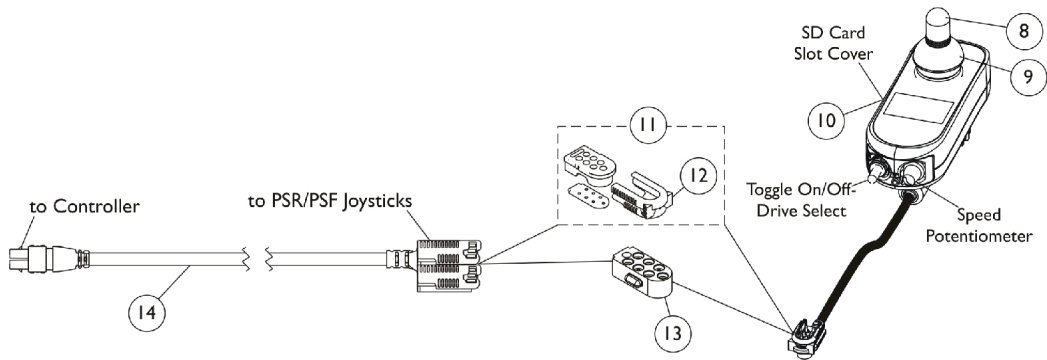


Item #1 (1139944)
ON CHAIR: PSFM6

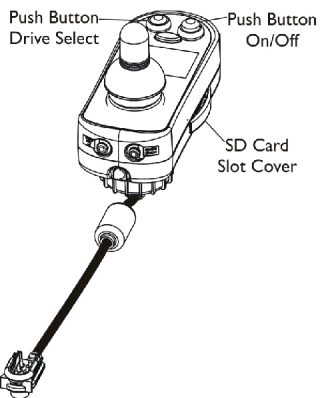


Item #2 (1140047)
ON CHAIR:
PSRM6/PBOD/OR

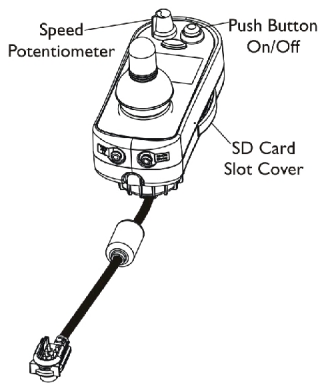

 
Item #3 (1139941)
ON CHAIR:
PSRM6/PBSS/OR

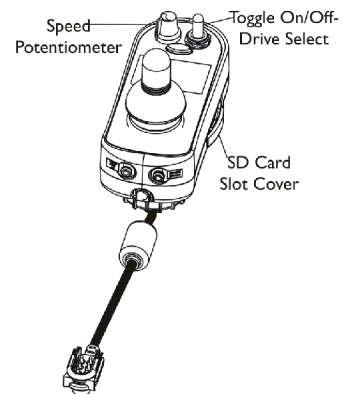


Item #4 (1144844)
ON CHAIR:
PSRM6/OR

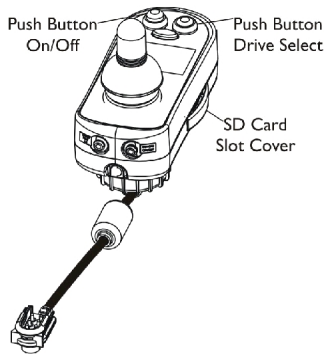 

 Item #5 (1140048)
ON CHAIR:
PSRM6/PBOD/OL

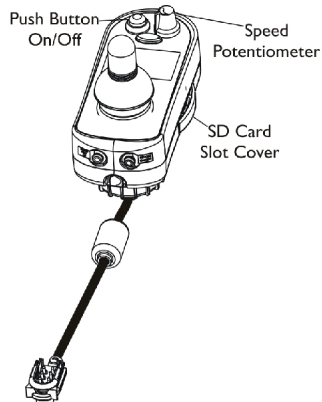

 Item #6 (1140046)
ON CHAIR:
PSRM6/PBSS/OL

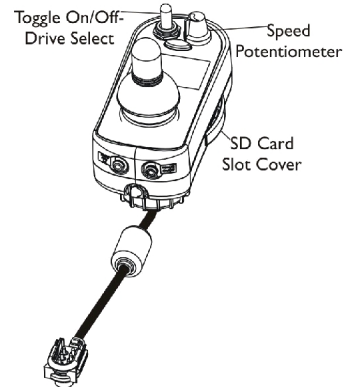

Item #7 (1144845)
ON CHAIR:
PSRM6/OL

PSFM6/PSRM6 Joysticks

NOTE: Available 4/16/07

Item Number	Note	Part Number	Description	Quantity Per	
				Package	Assembly
1	A	1139944-NLA	NLA - Joystick, PSFM6	1	1
2	B	1140047-NLA	NLA - Joystick, PSRM6/PBOD/OR	1	1
3	C	1139941-NLA	NLA - Joystick, PSRM6/PBSS/OR	1	1
4	D	1144844-NLA	NLA - Joystick, PSRM6/OR	1	1
5	E	1140048-NLA	NLA - Joystick, PSRM6/PBOD/OL	1	1
6	F	1140046-NLA	NLA - Joystick, PSRM6/PBSS/OL	1	1
7	G	1144845-NLA	NLA - Joystick, PSRM6/OL	1	1
8		1040217	Knob, Joystick Rubber, Black	1	1
9		1040218	Skirt, Joystick Rubber, Black	1	1
10		1145074	Package, Cover Slot SD (For MPJM6/CMPJM6 & PSFM6/PSRM6 Joysticks)	10	1
11	H	1133182	Cap, Top Connector, 7 Pin, Black	1	1
12	L	1145408-NLA	NLA - Latch, Top Connector, Black	1	1
13		1133183-NLA	NLA - Cap, Bottom Connector, 7 Pin	1	1
14	I	1140038-NLA	NLA - Cable, MK6i Joystick Extension, (PWH) (34" L)	1	1
14	J	1133180	Cable, MK6i Joystick Extension, (PWH) (16" L)	1	1
14	K,K1	1140039-NLA	NLA - Cable, MK6i Joystick Extension, (PWH) (58" L)	1	1

NOTE: A - This PSFM6 Joystick has a toggle on/off-drive select (left side) & speed select potentiometer knob (right side) STANDARD
 B - This PSRM6/PBOD/OR Joystick has a push button on/off (right side) & push button drive select (left side)
 C - This PSRM6/PBSS/OR Joystick has a push button on/off (right side) & speed select potentiometer knob (left side)
 D - This PSRM6/OR Joystick has a toggle on/off-drive select (right side) & speed select potentiometer knob (left side)
 E - This PSRM6/PBOD/OL Joystick has a push button on/off (left side) & push button drive select (right side)
 F - This PSRM6/PBSS/OL Joystick has a push button on/off (left side) & speed select potentiometer knob (right side)
 G - This PSRM6/OL Joystick has a toggle on/off-drive select (left side) & speed select potentiometer knob (right side)
 H - Includes Main Body, Gasket and Latch. Latch is the only item offered individually
 I - Used on Non-Elevate 3G Storm Series wheelchairs Before 12/10/07.
 J - Used on all wheelchairs with multi-purpose joystick (MPJ/CMPJ) (excluding Note I) and WithOut any of the following: Any power seating; LNX/ELRPW power leg options; or any of the electronics in K1. It is used with MPCTMT and conventional actuators.
 K - Used on all wheelchairs with multi-purpose joystick (MPJ/CMPJ) and With any of the following: Any power seating option; LNX/ELRPW power leg options; or With any of the electronics in K1
 K1 - SNPM6, 5018M6, 5020M6, 1558M6, PACM6, 4WSB, S4WSB, AUX12M6, AUX34M6, RFM, IR, SANODE, ELRPW, ELRPW22, LNX, LNX-L. Also used on all Formula seating SMTACT and MPCTMT.
 L - Item 12 part #1145408 is No Longer Available separately, order item 11 part #1133182