
## Casters - 6" and 8"

## THE PRODUCTION OF THE HTR IS CURRENTLY SUSPENDED AND SOME SERVICE PARTS MAY NOT BE AVAILABLE TO ORDER.

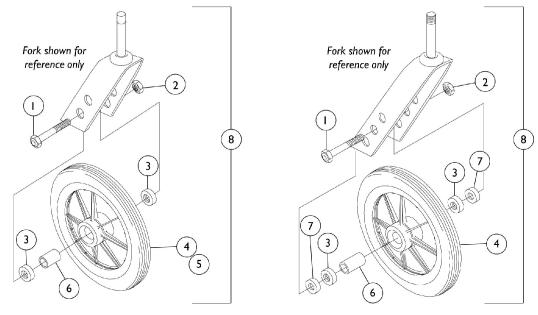

8" Caster

6" Caster

ltem				Quantity Per	
Number	Note	Part Number	Description	Package	Assembly
1	С	57667P007	Screw, Hex Head (7/16-20 x 3-1/4")	1	1
1	D	7930362	Package, Screw, Hex Head (5/16-24 x 2-1/4")	25	1
2	С	1045608	Locknut (7/16-20)	1	1
2	D	7930363-NLA	NLA - Package, Locknut (5/16"-24)	25	1
3	С	1010810	Bearing, Flange (7/16")	1	2
3	D	40117X026	Bearing, Flange (5/16")	1	2
4	В	1058648	Wheel Assembly, Composite Solid Rubber (8" x 1")	1	1
4	A,B	1026956	Wheel Assembly, Composite Urethane, Light Grey (6" x 1")	1	1
5		1040144	Tire, Composite Solid Rubber, Grey (8" x 1")	1	1
6	С	1017828	Spacer (7/16 x 15/32 x 1-5/8")	1	1
6	D	1026172	Spacer (5/16 x 7/16 x 15/32")	1	1
7		1053202	Spacer (5/16 x 7/16 x 1/4")	1	2
8	С	430054	Kit, Wheel with Hardware (8" x 1") (Pair)	2	1
8	D	1088017	Kit, Wheel with Hardware (6" x 1")	1	1
B C	- Includes - Used fo	oolded to the wheel, it :: Wheel, Tire and Bea r 8" Caster. r 6" Caster.		1	1