


Bodypoint Anterior Trunk Support Harness and Hardware

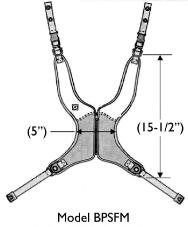


13" - 16" Wide Chairs

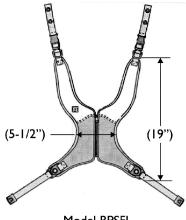


Model BPSFL 16" - 19" Wide Chairs

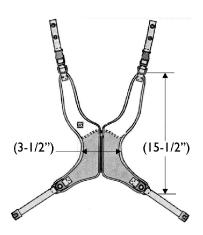


Model BPSFNM 13" - 16" Wide Chairs

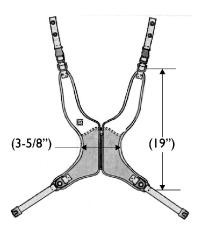

Model BPSFNL 16" - 19" Wide Chairs



Clinch Mounts

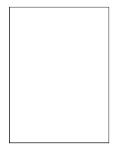

Installation Instructions

Bodypoint Anterior Trunk Support Harness and Hardware

Model	Description	Part Number
BPSFM	Kit, Anterior Trunk Support Harness	1163448-NLA
	and Hardware, Medium (13" - 16" W)	See Note(s) A
BPSFL	Kit, Anterior Trunk Support Harness	1163449-NLA
	and Hardware, Large (16" - 19" W)	See Note(s) A
BPSFNM	Kit, Anterior Trunk Support Harness	1163451-NLA
	and Hardware, Narrow-Medium (13" -	
	16" W)	See Note(s) A
BPSFNL	Kit, Anterior Trunk Support Harness	1163452-NLA
	and Hardware, Narrow-Large (16" -	
	19" W)	See Note(s) A
NOTE: A - Kit includes the Anterior Trunk Support Harness, clinch mount hardware and installation instruction sheet. Individual		

components are non-serviceable.