
NOTE: Curved Back mounts only to back canes without a 10 degree bend. NOTE: As of 8/15/08 the Curved Back material changed from ABS Plastic to Metal as inventory runs out. You must ask the customer if they have an ABS Plastic or the Metal Curved Back model when replacing components. All service replacement Back Assemblies with Hardware shipped will be metal. New Headrest Mounting Hardware is required when replacing an ABS Curved Back with a Metal Curved Back.

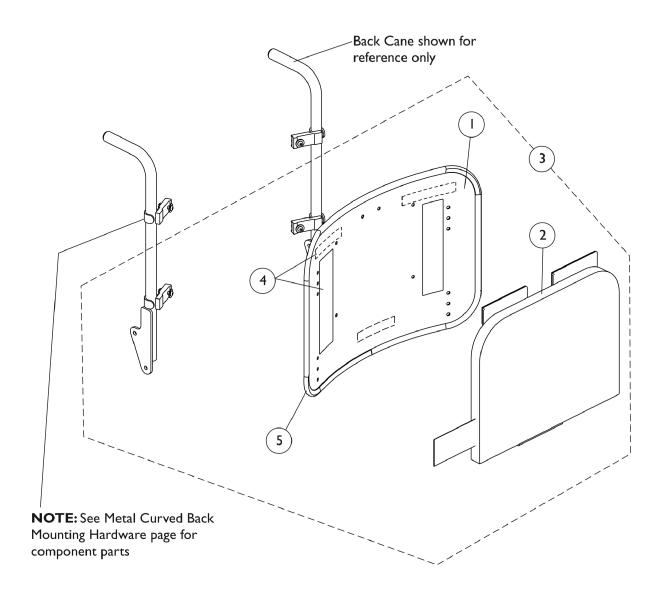

NOTE: Curved Back mounts only to back canes without a 10 degree bend. NOTE: As of 8/15/08 the Curved Back material changed from ABS Plastic to Metal as inventory runs out. You must ask the customer if they have an ABS Plastic or the Metal Curved Back model when replacing components. All service replacement Back Assemblies with Hardware shipped will be metal. New Headrest Mounting Hardware is required when replacing an ABS Curved Back with a Metal Curved Back.

ltem				Quantity Per			
Number	Note	Part Number	Description	Package	Assembly		
1		See Chart	#1 Back Pan w/ Vinyl Edge Trim 16"-18" Wide	1	1		
1		See Chart	#1 Back Pan w/ Vinyl Edge Trim 19"-22" Wide	1	1		
2		See Chart	#2 Back Cushion Assembly 16"-18" Wide	1	1		
2		See Chart	#2 Back Cushion Assembly 19"-22" Wide	1	1		
3		See Chart	#3 Back Assembly with Hardware 16"-18" Wide	1	1		
3		See Chart	#3 Back Assembly with Hardware 19"-22" Wide	1	1		
4	А	1125723	Kit, Hook Fastener w/ Adhesive Back	1	1		
5		1125724-NLA	NLA - Trim, Edge, Cut-To-Length, Vinyl Black (96"	1	1		
			L)				
NOTE: A - Hook Fastener Adhesive Kit is used to attach the Back Cover to the Back Pan and must be ordered when a new Back Pan							
or Back Assembly is requested.							

## #1 Back Pan w/ Vinyl Edge Trim - 16"-18" Wide

Overall Back Height	Material Back Height	16" Wide	17" Wide	18" Wide			
16"	11"	1157826	1157837	1157848			
17"	12"	1157827	1157838	1157849			
18"	13"	1157828	1157839	1157850			
19"	14"	1157829	1157840	1157851			
20"	15"	1157830	1157841	1157852			
21"	16"	1157831	1157842	1157853			
22"	17"	1157832	1157843	1157854			
23"	18"	1157833	1157844	1157855			
24"	19"	1157834	1157845	1157856			
NOTE: Hook Fastener Adhesive Kit must be ordered when a Back Pan or Back Assembly is requested. This will allow the Loop Fastener Adhesive on the Back Cover to attach properly.							

NOTE: Curved Back mounts only to back canes without a 10 degree bend. NOTE: As of 8/15/08 the Curved Back material changed from ABS Plastic to Metal as inventory runs out. You must ask the customer if they have an ABS Plastic or the Metal Curved Back model when replacing components. All service replacement Back Assemblies with Hardware shipped will be metal. New Headrest Mounting Hardware is required when replacing an ABS Curved Back with a Metal Curved Back.

Overall Back Height	Material Back Height	19" Wide	20" Wide	21" Wide	22" Wide
16"	11"	1157859	1157870	1157881	1157892
17"	12"	1157860	1157871	1157882	1157893
18"	13"	1157861	1157872	1157883	1157894
19"	14"	1157862	1157873	1157884	1157895
20"	15"	1157863	1157874	1157885	1157896
21"	16"	1157864	1157875	1157886	1157897
22"	17"	1157865	1157876	1157887	1157898
23"	18"	1157866	1157877	1157888	1157899
24"	19"	1157867	1157878	1157889	1157900

#### #1 Back Pan w/ Vinyl Edge Trim - 19"-22" Wide

NOTE: Hook Fastener Adhesive Kit must be ordered when a Back Pan or Back Assembly is requested. This will allow the Loop Fastener Adhesive on the Back Cover to attach properly.

NOTE: When ordering Metal Curved Back assemblies to replace ABS Back Pans, match the wheelchair width by the material back height to determine the correct part number to order.

### #2 Back Cushion Assembly - 16"-18" Wide

Overall Back Height	Material Back Height	16" Wide	17" Wide	18" Wide
16"	12-1/2"	1160207	1160218	1160229
17"	13-1/2"	1160208	1160219	1160230
18"	14-1/2"	1160209	1160220	1160231
19"	15-1/2"	1160210	1160221	1160232
20"	16-1/2"	1160211	1160222	1160233
21"	17-1/2"	1160212	1160223	1160234
22"	18-1/2"	1160213	1160224	1160235
23"	19-1/2"	1160214	1160225	1160236
24"	20-1/2"	1160215	1160226	1160237

NOTE: Curved Back mounts only to back canes without a 10 degree bend. NOTE: As of 8/15/08 the Curved Back material changed from ABS Plastic to Metal as inventory runs out. You must ask the customer if they have an ABS Plastic or the Metal Curved Back model when replacing components. All service replacement Back Assemblies with Hardware shipped will be metal. New Headrest Mounting Hardware is required when replacing an ABS Curved Back with a Metal Curved Back.

#### Overall Material 19" Wide 20" Wide 21" Wide 22" Wide Back Height Back Height 12-1/2" 16" 1097378-NLA 1097379-NLA 1097380-NLA 1097381-NLA 17" 13-1/2" 1097385-NLA 1097386-NLA 1097387-NLA 1097388-NLA 18" 14-1/2" 1097392 1097393 1097394-NLA 1097395-NLA 19" 15-1/2" 1097399 1097400 1097401 1097402 20" 16-1/2" 1097406 1097407 1097408 1097409 17-1/2" 21" 1097413 1097414 1097415 1097416 22" 18-1/2" 1097420 1097421 1097422 1097423 23" 19-1/2" 1097427 1097428 1097429 1097430 24" 20-1/2" 1097434 1097435 1097436 1097437

#### #2 Back Cushion Assembly - 19"-22" Wide

NOTE: Back cover and foam are sold as a Back Cushion Assembly only.

NOTE: Curved Back mounts only to back canes without a 10 degree bend. NOTE: As of 8/15/08 the Curved Back material changed from ABS Plastic to Metal as inventory runs out. You must ask the customer if they have an ABS Plastic or the Metal Curved Back model when replacing components. All service replacement Back Assemblies with Hardware shipped will be metal. New Headrest Mounting Hardware is required when replacing an ABS Curved Back with a Metal Curved Back.

Overall Back Height	Material Back Height ABS Plastic Curved	Material Back Height Metal Curved	16" Wide	17" Wide	18" Wide
16"	12"	11"	1106973-NLA	1106983	1106993
17"	13"	12"	1106974	1106984	1106994
18"	14"	13"	1106975	1106985	1106995
19"	15"	14"	1106976	1106986	1106996
20"	16"	15"	1106977	1106987	1106997
21"	17"	16"	1106978	1106988	1106998
22"	18"	17"	1106979	1106989	1106999
23"	19"	18"	1106980	1106990	1107000
24"	20"	19"	1106981	1106991	1107001

#### #3 Back Assembly with Hardware - 16" -18" Wide

NOTE: Hook Fastener Adhesive Kit must be ordered when a Back Pan or Back Assembly is requested. This will allow the Loop Fastener Adhesive on the Back Cover to attach properly.

NOTE: When ordering Metal Curved Back assemblies to replace ABS Back Pans, match the wheelchair width by the material back height to determine the correct part number to order.

### #3 Back Assembly with Hardware - 19"-22" Wide

Overall Back Height	Material Back Height ABS Plastic Curved	Material Back Height Metal Curved	19" Wide	20" Wide	21" Wide	22" Wide	
16"	12"	11"	1107003	1107013	1107023	1107033	
17"	13"	12"	1107004	1107014	1107024	1107034	
18"	14"	13"	1107005	1107015	1107025	1107035	
19"	15"	14"	1107006	1107016	1107026	1107036	
20"	16"	15"	1107007	1107017	1107027	1107042-NLA	
21"	17"	16"	1107008	1107018	1107028	1107043	
22"	18"	17"	1107009	1107019	1107029	1107044	
23"	19"	18"	1107010	1107020	1107030	1107045	
24"	20"	19"	1107011	1107021	1107031	1107046	
NOTE: Hook Fastener Adhesive Kit must be ordered when a Back Pan or Back Assembly is requested. This will allow the Loop Fastener Adhesive on the Back Cover to attach properly.							