



# Refresh Kits

## Pronto M41

1

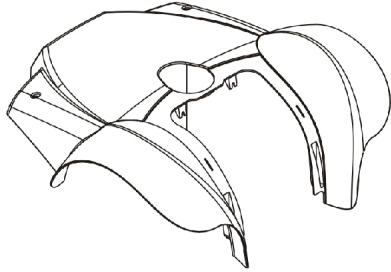


**Top Shroud Assembly**

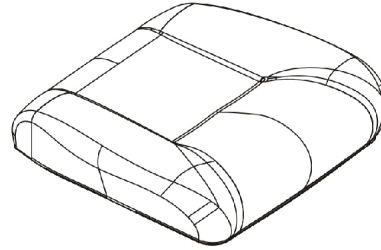

**Semi-Recline  
Van Seat Base Assembly  
(Office Style Dark Grey/Charcoal)**




**Joystick Knob**

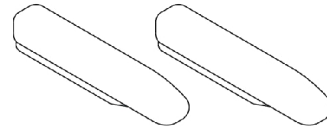


**Semi-Recline  
Van Seat Arm Pads**

2

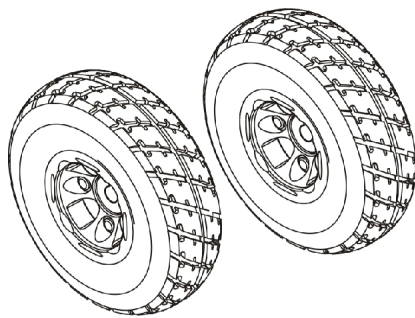

**Drive Wheel Assemblies  
w/ Flat Free Tire  
(10" x 3")**

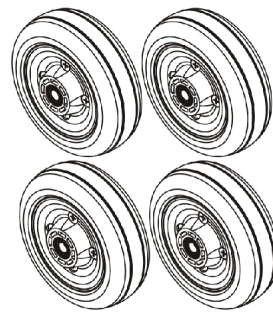

**Caster Wheel Assemblies,  
Urethane  
Deep Profile  
(6" x 2")**

## Refresh Kits Pronto M41

Item Number	Note	Part Number	Description	Quantity Per	
				Package	Assembly
1	A,B,D, E	1173785-NLA	NLA - Kit, Refresh, Pronto M41, Red w/ Instructions	1	1
1	A,B,D, E	1173786-NLA	NLA - Kit, Refresh, Pronto M41, Blue w/ Instructions	1	1
2	C,E	1173787-NLA	NLA - Kit, Refresh, Drive Wheels w/ Flat Free, Caster Wheels and Instructions	1	1
<p>NOTE: A - Kit includes (1) ea. Top Shroud Assembly, (1) ea. Semi-Recline Van Seat Base Assembly, (1) ea. Joystick knob, (2) ea. Semi-Recline Van Seat Arm Pads, (1) ea. Literature Package and Service Manual not shown.</p> <p>B - Not Shown. Literature Package includes (1) ea. MK5 NX Programmer Manual, (1) ea. Owner's Manual, (3) ea. Cable Ties.</p> <p>C - Kit includes (2) ea. 10" x 3" Driver Wheels w/ Flat Free Tires, (4) ea. 6" x 2" Caster Wheels and a Service Manual not shown.</p> <p>D - Kits used for 18" wide Office Style Semi-Recline Van Seat Assembly.</p> <p>E - Includes part #1190604 Supplemental Power Wheelchair Warnings/Wear and Tear Information Owner's Manual.</p>					