


Rear Anti-Tipper

Standard seat angle is set at 3°, when changing to 6°, Anti-Tippers MUST be ordered. To determine chair config. degree for Anti-Tippers, dealer should look in Service Manual #1088234. All notations of STF heights are listed in book according to Wheel and Caster size.

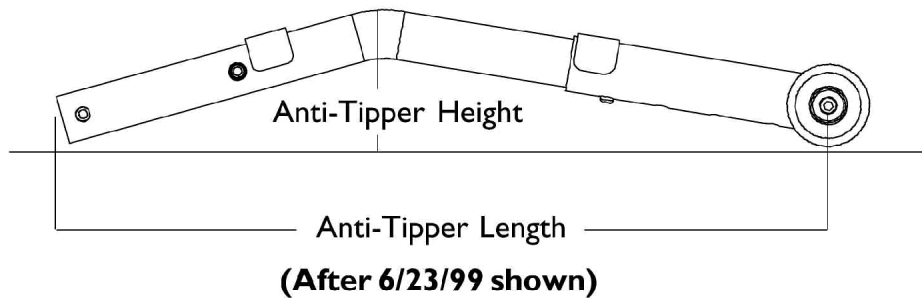

Rear Anti-Tipper

Standard seat angle is set at 3°, when changing to 6°, Anti-Tippers MUST be ordered. To determine chair config. degree for Anti-Tippers, dealer should look in Service Manual #1088234. All notations of STF heights are listed in book according to Wheel and Caster size.

Patriot with 0 deg. or 3 deg. Seat Angle (Before 6/24/99)

Kit Number	Seat to Floor Height	Anti-Tipper Length	Anti-Tipper Height	On Chair Model Number	Caster Size
1050644-NLA	16-1/2, 17-1/2, 20"	13-3/4"	3-1/2"	P1580A	8"
1050641 See Note(s) A	15-3/4"	12-3/4"	2-7/8"	P1580SHE	6" (SHE) See Note(s) B
NOTE: A - Anti-Rattle Collar not included on chairs built before 6/24/99 (use 1" Collar). B - SHE stands for Super Hemi wheelchairs with 16-3/4" seat-to-floor height on chairs built before 6/24/99, and 15-1/2" seat-to-floor height on chairs built after 6/23/99.					
Standard seat angle is set at 3 deg., when changing the seat angle to 6 deg., Anti-Tippers MUST be ordered. To determine chair configuration degree for Anti-Tippers, dealer should look in Service Manual number 1088234. All notations of STF heights are listed in book according to Wheel and Caster size.					

Patriot with 0 deg. or 3 deg. Seat Angle (After 6/23/99)

Kit Number	Seat to Floor Height	Anti-Tipper Length	Anti-Tipper Height	On Chair Model Number	Caster Size
1090113	17-1/2, 18-1/2, 19-1/2"	14"	4-1/2"	P1580	8"
1050644-NLA	16-1/2, 17-1/2"	13-3/4"	3-1/2"	P1580A	6"
1050641	15-1/2"	12-3/4"	2-7/8"	P1580SH	6" (SHE) See Note(s) B
NOTE: B - SHE stands for Super Hemi wheelchairs with 16-3/4" seat-to-floor height on chairs built before 6/24/99, and 15-1/2" seat-to-floor height on chairs built after 6/23/99.					
Standard seat angle is set at 3 deg., when changing the seat angle to 6 deg., Anti-Tippers MUST be ordered. To determine chair configuration degree for Anti-Tippers, dealer should look in Service Manual number 1088234. All notations of STF heights are listed in book according to Wheel and Caster size.					

Patriot with 6 deg. Seat Angle (After 6/23/99)

Kit Number	Seat to Floor Height	Anti-Tipper Length	Anti-Tipper Height	On Chair Model Number	Caster Size
1090114	17-1/2, 18-1/2, 19-1/2"	14-1/4"	3-1/4"	N/A	8"
1090115	16-1/2, 17-1/2"	12-3/4"	2-1/4"	N/A	6"
1090116	15-1/2"	10"	1-3/4"	N/A	6" (SHE) See Note(s) A
NOTE: A - SHE stands for Super Hemi wheelchairs with 16-3/4" seat-to-floor height on chairs built before 6/24/99, and 15-1/2" seat-to-floor height on chairs built after 6/23/99.					
Standard seat angle is set at 3 deg., when changing the seat angle to 6 deg., Anti-Tippers MUST be ordered. To determine chair configuration degree for Anti-Tippers, dealer should look in Service Manual number 1088234. All notations of STF heights are listed in book according to Wheel and Caster size.					