NOTE: Check ALL parts for shipping damage. If shipping damage is noted, DO NOT use. Contact Carrier/Dealer for further instruction.

SAFETY SUMMARY

The following recommendations are made for the safe use of the ROLLATORS:

GENERAL WARNINGS

DO NOT install this equipment without first reading and understanding this instruction sheet. If you are unable to understand the Warnings, Cautions and Instructions, contact a healthcare professional, dealer or technical personnel if applicable before attempting to install this equipment - otherwise, injury or damage may occur.

A physical/occupational therapist should assist in the placement and positioning of the hand grips for maximum support and correct brake activation. Be sure the rollator is properly balanced BEFORE using.

Care should be taken to ensure that ALL hand and height adjustments are secure, and that casters and moving objects are in good working order before using this or any mobility aid.

All wheels MUST be in contact with the floor at ALL TIMES during use.

On Model 65420, the brakes MUST be in the locked position BEFORE using the seat.

The Rollator is NOT intended for propelling while seated. It is NOT to be pushed and/ or used as a wheelchair.

The Rollator is designed to provide support, increased stability and assistance to the end user while walking. The 3-Wheel Rollator is NOT designed to support the total weight of an individual and has a weight limitation of 250 lbs. (114kg.). The 4-Wheel Rollator can provide ambulatory assistance for an individual weighing up to 270 lbs. (123kg.), INCLUDING the weight of the contents of the basket and tray.

GENERAL WARNINGS (CONTINUED)

The seat on Model 65420 can support an individual weighing up to 270 lbs. (123 kg.).

The Rollator basket has a weight limit of 15 lbs. (6 kg.). The Rollator tray has a weight limit of 5 lbs. (4.5 kg.).

INSTALLATION WARNINGS

Always test to see that the rollator is properly and securely locked when in the open position BEFORE using.

The rollator height can ONLY be adjusted where the push handle is textured (FIGURE 3).

After installation and BEFORE use, ensure that ALL attaching hardware is securely tightened.

OPENING/FOLDING ROLLATOR

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

Model 65400 (FIGURE 1)

OPENING.

1. Remove the rollator from the carton.
2. Pivot left and right side frames outward.
3. Push DOWN on the side of the center tab so that the lock support mechanism is straight.
4. Install the push handles into the side frame. Refer to INSTALLING/ADJUSTING PUSH HANDLES in this instruction sheet.

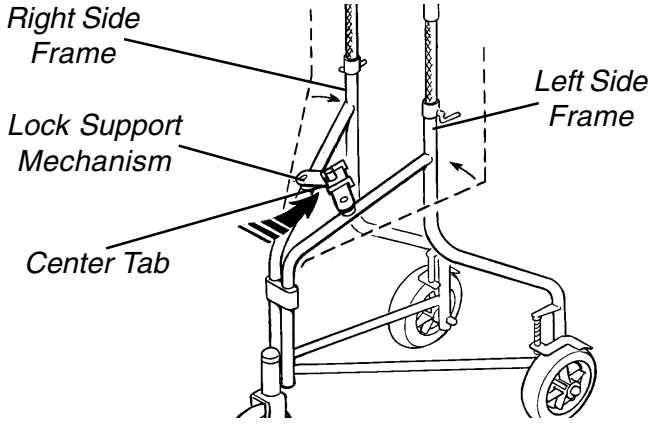

FIGURE 1 - OPENING/FOLDING ROLLATOR - MODEL 65400

FOLDING.

1. Pull UP on center tab to release the lock support mechanism.
2. Pivot left and right side frames inward.

Model 65420 (FIGURE 2)

OPENING.

1. Remove the rollator from the carton.
2. Remove the shipping tube that extends between the two (2) rear wheels.
3. Hold cutout in seat and push DOWN on seat until an audible "click" is heard.
4. Install the push handles into the side frame. Refer to INSTALLING/ADJUSTING PUSH HANDLES in this instruction sheet.

FOLDING.

1. Grasp cutout in seat and pull UP.

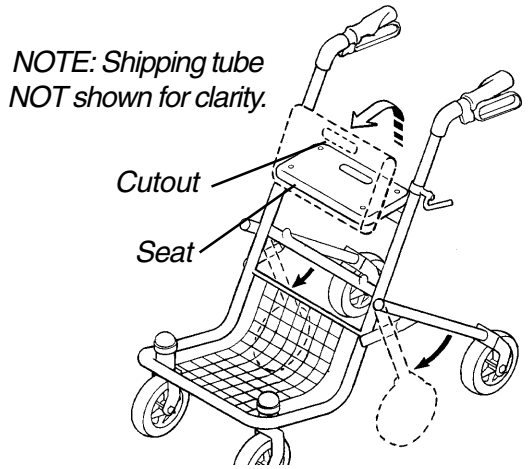

FIGURE 2 - OPENING/FOLDING ROLLATOR - MODEL 65420

INSTALLING/ADJUSTING PUSH HANDLES (FIGURE 3)

NOTE: Refer to GENERAL AND INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

Installing

1. Turn adjustment levers COUNTERCLOCKWISE.

NOTE: For Model 65420, the rollator will need to be slightly folded due to the length of the brake cable. Refer to OPENING/FOLDING ROLLATOR in this instruction sheet.

2. Insert push handles into side frames with the hand grip facing the back of the rollator.
3. Adjust the push handles. Refer to ADJUSTING PUSH HANDLES in this procedure of the instruction sheet.

Adjusting

NOTE: For the most comfortable position, make sure the adjustment is performed while wearing the most frequently worn shoes.

1. If necessary, Loosen adjustment lever.
2. Position the push handle so that when the user's arm is down to their side, the hand grip is at wrist height.

NOTE: This will ensure the arms are at an approximate 20°-30° bend when using the rollator.

3. Ensure that the push handle is adjusted ONLY where the tubing is textured.
4. Securely tighten push handle by turning adjustment lever CLOCKWISE.

NOTE: When securely tightened, the push handle should not move.

5. Repeat STEPS 1 - 3 for remaining push handle.
6. Do one (1) of the following:
   A. If necessary, install the basket. Refer to INSTALLING BASKET in this instruction sheet.
   B. If necessary, install the tray. Refer to INSTALLING THE TRAY in this instruction sheet.
   C. Before using the rollator, refer to USING HAND BRAKES in this instruction sheet.

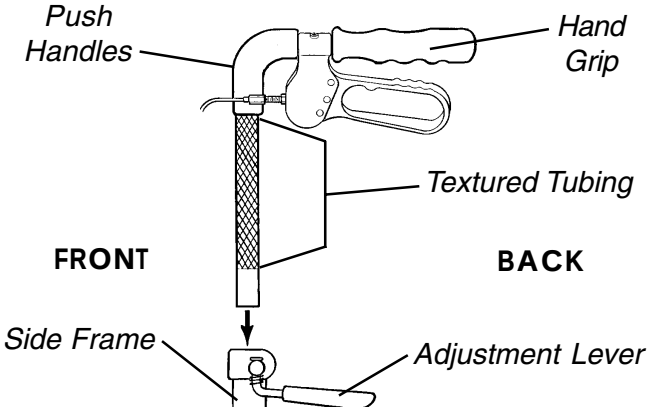

FIGURE 3 - INSTALLING/ADJUSTING PUSH HANDLES

INSTALLING BASKET - MODEL 65420 ONLY (FIGURE 4)

NOTE: Refer to GENERAL AND INSTALLATION WARNINGS in the SAFETY SUMMARY of this instruction sheet.

NOTE: The rollator MUST be in the OPEN position when installing the basket.

1. Install both hooks of basket over seat support tube.

2. Do one (1) of the following:
   A. If necessary, install the tray. Refer to INSTALLING THE TRAY in this instruction sheet.
   B. Before using the rollator, refer to USING HAND BRAKES in this instruction sheet.

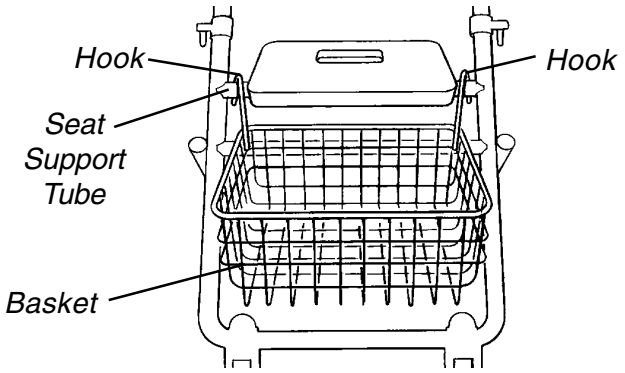

FIGURE 4 - INSTALLING BASKET - MODEL 65420 ONLY

INSTALLING THE TRAY - MODEL 65420 ONLY (FIGURE 5)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY of this instruction sheet.

NOTE: The rollator MUST be in the OPEN position when installing the tray.

1. Align the four (4) pins on the bottom of the tray with the four (4) holes in the seat.
2. Push down on tray to secure in place.
3. Before using the rollator, refer to USING HAND BRAKES in this instruction sheet.

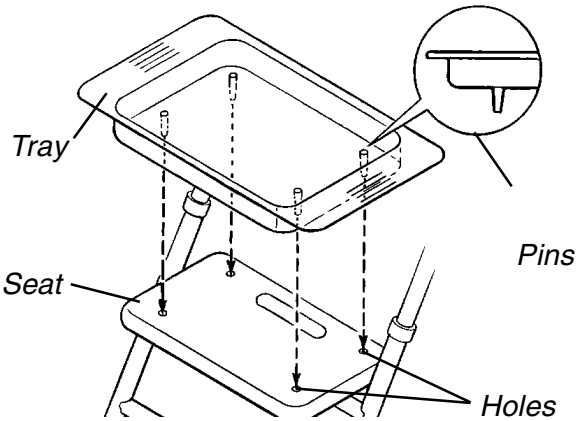

FIGURE 5 - INSTALLING THE TRAY - MODEL 65420 ONLY

LOCKING/UNLOCKING/USING HAND BRAKES

Locking Hand Brakes (For Stationary Use) (FIGURE 6)

1. Push down on the bottom portion of both brake handles as shown in FIGURE 6 until an audible "click" is heard.

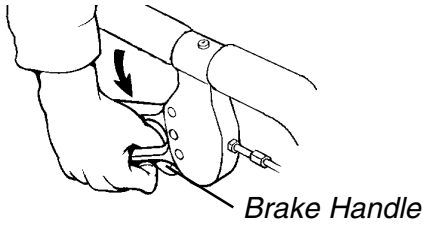

FIGURE 6 - LOCKING HAND BRAKES (FOR STATIONARY USE)

Unlocking Hand Brakes (FIGURE 7)

1. Pull UP on the top portion of both brake handles to release as shown in FIGURE 7.
2. Release brake handles.

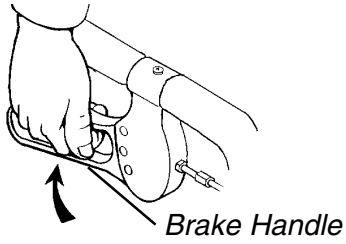

FIGURE 7 - UNLOCKING/USING HAND BRAKES

Using Hand Brakes (FIGURE 7)

1. Pull UP on the top portion of the brake handle(s).
2. Do one of the following:
   A. **Remain stationary** - continue holding the brake handle(s) UP.
   B. **Continue mobility** - release brake handle(s).

ADJUSTING THE HAND BRAKES

Adjusting the Brake Handle (FIGURE 8)

1. Loosen the brake handle adjustment nut by turning CLOCKWISE.
2. Do one (1) of the following:
   A. **Loosen brake handle tension** - turn brake handle nut COUNTERCLOCKWISE.
   B. **Tighten brake handle tension** - turn brake handle nut CLOCKWISE.

3. Turn the brake handle adjustment nut CLOCKWISE to secure in place.
4. Do one (1) of the following:
   A. **Acceptable tension** - repeat STEPS 1 - 3 for opposite side, if necessary.
   B. **Unacceptable tension** - refer to ADJUSTING CABLE ADJUSTER UNIT in this procedure of the instruction sheet.
5. Refer to LOCKING/UNLOCKING/USING HAND BRAKES in this instruction sheet.

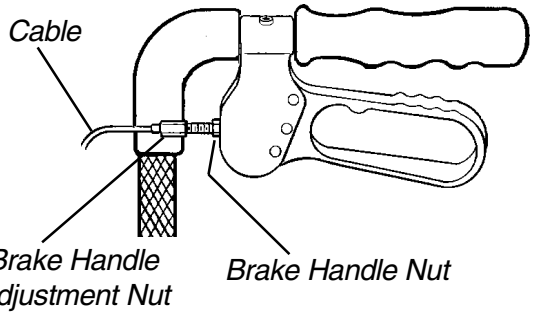

FIGURE 8 - ADJUSTING THE BRAKE HANDLE

Adjusting the Cable Adjuster Unit - Wheel Assembly Model 65400 (FIGURE 9)

NOTE: Adjusting the cable adjuster unit will increase/ decrease the cable brake pressure on the wheels.

NOTE: COUNTERCLOCKWISE/CLOCKWISE directions are determined by standing behind the rollator (users position).

1. Loosen the cable brake adjuster unit locknut.
2. Do one (1) of the following:
   A. To increase tension, turn the cable adjuster unit COUNTERCLOCKWISE.
   B. To decrease tension, turn the cable adjuster unit CLOCKWISE.
3. Retighten the cable adjuster unit locknut.
4. Test the brake. If the tension of the brake handle is STILL too loose/tight, perform the following:
   A. Repeat STEP 1.
   B. Loosen the phillips screw on the brake clamp.
   C. Pull the brake wire further through the brake clamp.

NOTE: There will be additional excess wire. It may be necessary to fold wire up to keep wire from interfering with brake action.

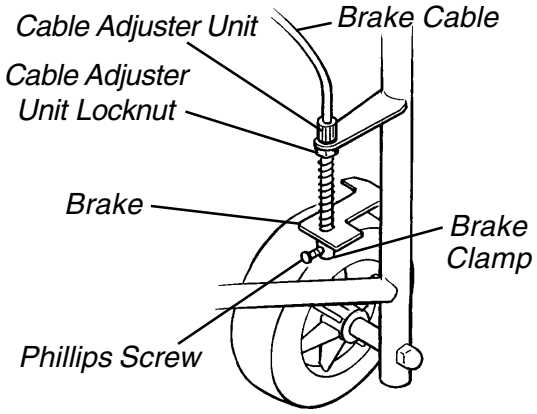

FIGURE 9 - ADJUSTING THE CABLE ADJUSTER UNIT - WHEEL ASSEMBLY - MODEL 65400

Adjusting the Cable Adjuster Unit - Cable Assembly - Model 65420 (FIGURE 10)

NOTE: Adjusting the cable adjuster unit will increase/ decrease the cable brake pressure on the wheels.

NOTE: COUNTERCLOCKWISE/CLOCKWISE directions are determined by standing behind the rollator (users position).

1. Loosen the cable brake adjuster unit locknut.
2. Do one (1) of the following:
   A. To increase tension, turn the cable adjuster unit COUNTERCLOCKWISE.
   B. To decrease tension, turn the cable adjuster unit CLOCKWISE.
3. Retighten the cable adjuster unit locknut.
4. Test the brake. If the tension of the brake handle is STILL too loose/tight, repeat STEPS 1-3.

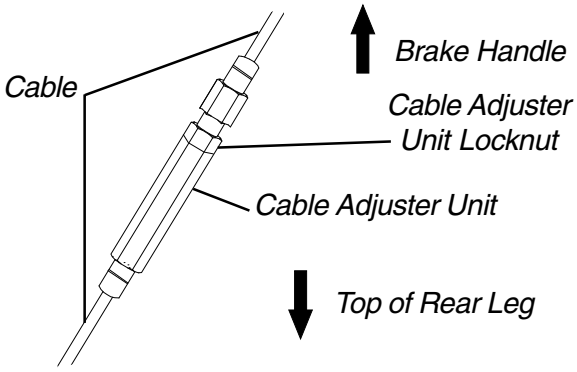

FIGURE 10 - ADJUSTING THE CABLE ADJUSTER UNIT - CABLE ASSEMBLY - MODEL 65420

REPLACING SEAT - MODEL 65420 ONLY (FIGURE 11)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

1. Refer to OPENING/FOLDING ROLLATOR in this instruction sheet.
2. Place on the floor with the back of the seat facing up.
3. Remove the four (4) screws, washers and two (2) spacers that secure the seat to the frame.
4. Remove the four (4) screws and two (2) brackets that secure the seat to the frame.
5. Remove the EXISTING seat.
6. Install NEW seat onto frame using NEW hardware. See FIGURE 9 for proper orientation. Tighten hardware against seat until snug.

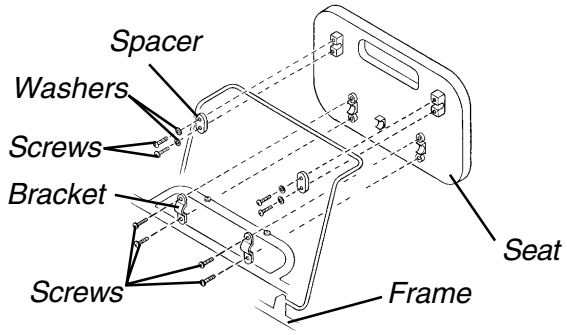

FIGURE 11 - REPLACING SEAT - MODEL 65420 ONLY

REPLACING TIRES (FIGURE 12)

NOTE: Refer to INSTALLATION WARNINGS in the SAFETY SUMMARY in this instruction sheet.

1. Remove the cap covers from both sides of the tire.
2. Remove the screw and locknut that secure the tire to the rollator.
3. Remove existing tire.
4. Install NEW tire and secure with NEW screw and NEW locknut.
5. Install NEW cap covers.

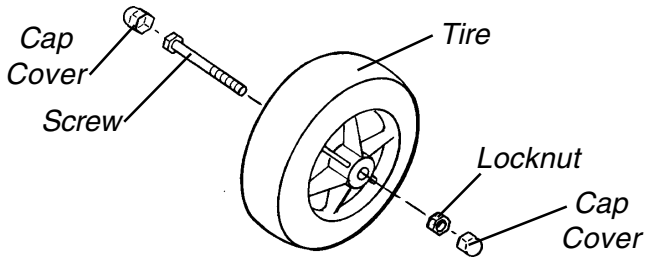

FIGURE 12 - REPLACING TIRES

NOTES

LIMITED WARRANTY

NOTE: THE WARRANTY BELOW HAS BEEN DRAFTED TO COMPLY WITH FEDERAL LAW APPLICABLE TO PRODUCTS MANUFACTURED AFTER JULY 4, 1975.

This warranty is extended only to the original purchaser/user of our product.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

Invacare warrants the frame to be free from defects in materials and workmanship for the lifetime of the product, six (6) years on the hand brakes and one (1) year for all other remaining components, excluding tires/wheels for the original purchaser/user. If within such warranty period any such product shall be proven to be defective, such product shall be repaired or replaced, at Invacare's option. This warranty does not include any labor or shipping charges incurred in replacement part installation or repair of any such product. Invacare's sole obligation and your exclusive remedy under this warranty shall be limited to such repair and/or replacement.

For warranty service, please contact the dealer from whom you purchased your Invacare product. In the event you do not receive satisfactory warranty service, please write directly to Invacare at the address on the back page, provide dealers name, address, date of purchase, indicate nature of the defect and, if the product is serialized, indicate the serial number. Do not return products to our factory without our prior consent.

LIMITATIONS AND EXCLUSIONS: THE FOREGOING WARRANTY SHALL NOT APPLY TO SERIAL NUMBERED PRODUCTS IF THE SERIAL NUMBER HAS BEEN REMOVED OR DEFACED; PRODUCTS SUBJECTED TO NEGLIGENCE, ACCIDENT, IMPROPER OPERATION, IMPROPER MAINTENANCE OR STORAGE, COMMERCIAL OR INSTITUTIONAL USE; PRODUCTS MODIFIED WITHOUT INVACARE'S EXPRESS WRITTEN CONSENT INCLUDING, BUT NOT LIMITED TO, MODIFICATION THROUGH THE USE OF UNAUTHORIZED PARTS OR ATTACHMENTS; PRODUCTS DAMAGED BY REASON OF REPAIRS MADE TO ANY COMPONENT WITHOUT THE SPECIFIC CONSENT OF INVACARE; OR TO A PRODUCT DAMAGED BY CIRCUMSTANCES BEYOND INVACARE'S CONTROL. SUCH EVALUATION WILL BE SOLELY DETERMINED BY INVACARE. THE WARRANTY SHALL NOT APPLY TO PROBLEMS ARISING FROM NORMAL WEAR OR FAILURE TO ADHERE TO THESE INSTRUCTIONS.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, IF ANY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL NOT EXTEND BEYOND THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN AND THE REMEDY FOR VIOLATIONS OF ANY IMPLIED WARRANTY SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT PURSUANT TO THE TERMS CONTAINED HEREIN. INVACARE SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

THIS WARRANTY SHALL BE EXTENDED TO COMPLY WITH STATE/PROVINCIAL LAWS AND REQUIREMENTS.

Invacare Corporation www.invacare.com

USA
One Invacare Way
Elyria, Ohio USA
44036-2125
800-333-6900

Yes, you can.™

Invacare is a registered trademark of Invacare Corporation.
©2000 Invacare Corporation

Form No. 97-319 Part No. 1076166 Rev D (3) 9/00